




Texas Electronics, Inc.

The Gold Standard in Weather Instrumentation Since 1957

Wind Direction Vane

TD-106-5D Wind Direction Sensor

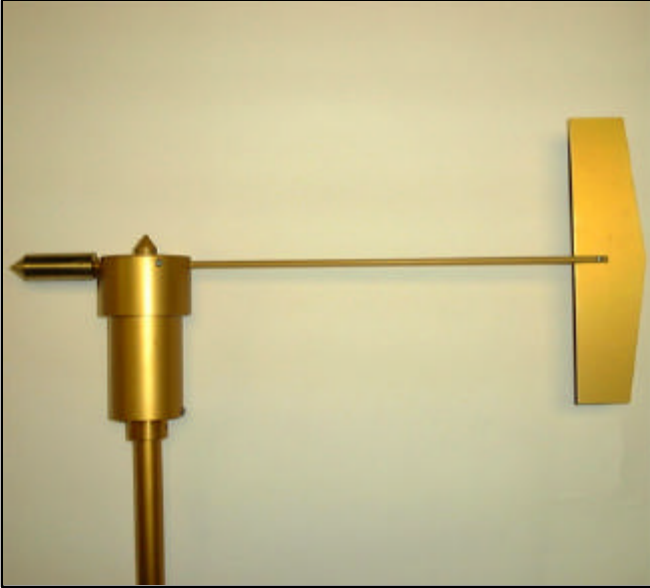

Description

The Texas Electronics, Inc. TD-106-5D Wind Direction Sensor is a mechanical style wind meter that measures the horizontal wind azimuth. This unit combines small physical size with superior bearings to meet the EPA's Prevention of Significant Deterioration (PSD) requirements.

The TD-106-5D wind direction sensor is a freestanding device for measuring the direction of wind. The sensor consists of a vane and counterweight assembly, which is mechanically coupled to a potentiometer (variable resistor). As the vane rotates in the wind, the potentiometer changes resistance proportionally to the direction of wind.

Features & Benefits

- Superior low starting threshold
- Long life hybrid single wiper potentiometer
- No plastic parts for extremely long life
- Precision stainless steel bearings for stability and repeatability
- Crossarm included with purchase of matching wind speed sensor
- Easy installation and maintenance
- Over 25 years in production
- Lightweight and rugged anodized aluminum exterior

Specifications

Operating Range:	0-360° mechanical, 0-357° electrical
Signal Presentation:	5000 ohm potentiometer
Potentiometer linearity:	+/- 0.5%
Performance:	
Accuracy:	+/- 3.0°
Starting Threshold:	1.1 mph (0.5 m/s)
Damping Ratio:	0.4 to 0.6
Damped Wavelength:	11.5' (3.5 m)
Delay Distance:	2.6' (0.8 m)
Resolution:	1°
Environmental:	
Operational Envelope:	0-135 mph (0 to 60 m/s)
Temperature:	-40 to 160° F (-40 to 70° C)
Relative Humidity:	0-100%
Physical:	
Vane Overall Length:	18.8" (48 cm)
Overall Height:	8.75" (22 cm)
Weight:	1.3 lbs (0.6 kg) less cable
Bearings:	APEC 3 or better
Mounting Pole:	0.75" I.D. (1.9 cm)
Cable:	60' (18.3 m) 3 conductor 22 gauge
Warranty:	3 year

Texas Electronics, Inc.
 5529 Redfield Street • Dallas, TX 75235
 Tel.214.631.2490 • Fax.214.631.4218 • 800.424.5651
www.texaselectronics.com • email: info@texaselectronics.com

Installation & Maintenance

Installation consists of attaching the unit to a mast via the supplied mounting pole. If a crossarm is used, the entire unit can be bolted to a mast or attached via U-bolts.

The sensor is dynamically calibrated at the factory and due to the nature of its operation should not require field calibration. Calibration is a matter of proper orientation during installation. A magnetic compass is recommended for proper orientation. Field maintenance should include occasional cleaning of the vane assembly and inspection of the internal mechanism to make sure it is free from insects and debris. In some applications users may need to occasionally verify and document sensor accuracy with a calibration dial/vane. Possible bearing and potentiometer replacement every three to five years to maintain low starting threshold.

Ordering Information

<u>Model #</u>	<u>Description</u>
TD-106-5D	Wind Direction Sensor, Medium Industrial
TD-106-5DA	Wind Direction Sensor, 4-20 mA

** Sensor is designed to work with TV-110-L320 wind speed sensor.*

Optional Parts / Accessories

Cable	Additional Cable
-------	------------------